


WAP

Fahrzeugtechnik GmbH

Operation instructions

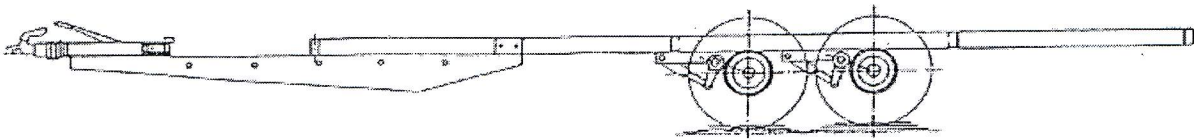

Mounting, adjustment and service instructions for the WAP-overrunning type brake installation, equipped with reversing automatic feature. Spare parts list as appendix.

## TABLE OF CONTENTS

<b>1. <u>CHARACTERISTICS</u></b> .....	<b>3</b>
<b>2. <u>COMPONENTS OF THE COMPLETE BRAKE INSTALLATION</u></b> .....	<b>3</b>
2.1. <u>Axle equipped with torsion bar suspension</u> .....	3
2.2. <u>Thrust equipment</u> .....	3
2.3. <u>Power transmission equipment</u> .....	3
<b>3. <u>OPERATION OF FORCE-DEPENDENT BRAKE SYSTEM EQUIPPED WITH REVERSING AUTOMATIC FEATURE</u></b> .....	<b>3</b>
3.1. <u>Forward drive</u> .....	3
3.2. <u>Reverse drive</u> .....	4
3.3. <u>Parking brake/disconnection brake</u> .....	5
<b>4. <u>MOUNTING AND ADJUSTING INSTRUCTIONS</u></b> .....	<b>5</b>
4.1. <u>Adjustment/readjustment of the wheel-brake</u> .....	6
4.2. <u>Brake test</u> .....	6
<b>5. <u>SERVICE INSTRUCTIONS</u></b> .....	<b>6</b>
5.1. <u>After abt. 50 driving kilometres</u> .....	6
5.2. <u>After abt. 500 driving kilometres</u> .....	6
5.3. <u>Always after 3000 driving kilometres</u> .....	6
5.4. <u>Adjusting of the gap of the wheel bearings</u> .....	6
<b>6. <u>GENERAL INSTRUCTIONS</u></b> .....	<b>7</b>
<b>7. <u>TROUBLESHOOTING</u></b> .....	<b>7</b>

